



Clearing Fault Codes:

1. There is a yellow plug under the dash that has two wires going into it. The plug is plugged into an empty socket by the fuse panel. As you look at the panel it's the one to the left side **NOT** the one at the top.
2. Take that plug out.
3. Place a jumper wire into the two holes connecting the two. I used a bent paperclip.
4. Turn the ignition key on. (lights on do not start engine).
5. The srs light will go off, within 4 seconds, unplug one side of the jumper wire, when the srs light comes back on plug the jumper back in,(within 4 seconds) the light will blink twice and go out.
6. Unplug the jumper and turn the ignition key off. Wait 15 seconds, then start your car. The memory will be reset.
7. Replace the plug and you're done. Turn ignition switch off, remove the jumper, abs light should be out